


# Clear Locking Hook™

# Instruction Sheet

## PARTS

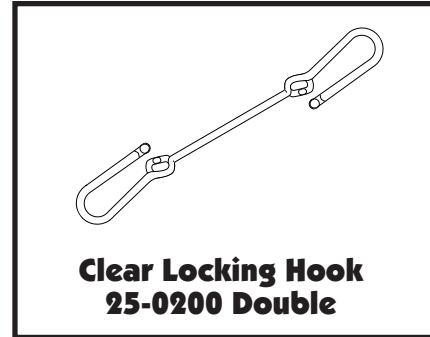

## Instructions For Hanging

### Step 1

Place open end of hook through pre-punched hole in poster or graphic, or through clip on holder.


### Step 2

Look closely at the opening in hook. It resembles a racetrack. Place post on end of hook into top end of the racetrack. **DO NOT FORCE** the post into the hole.

### Step 3

Once post has been inserted into top end of the race track, flex hook slightly to allow post to slide into lower end of the racetrack. This will lock the post in place.

Note: To unlock the hook- reverse the process.

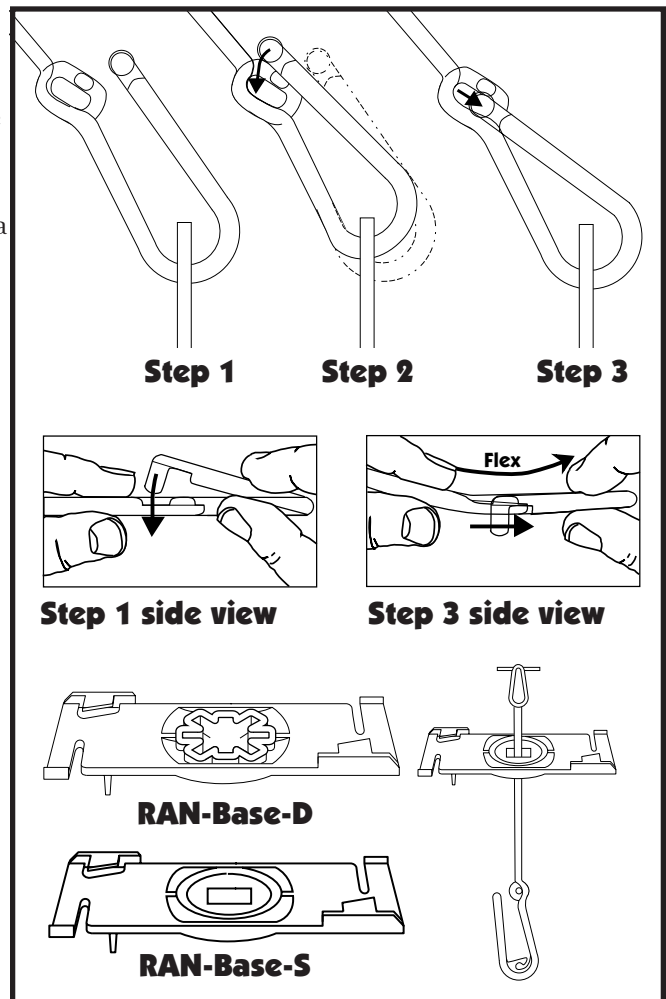

## Instructions for Clear Locking Hook & Clear Anchor Assembly:

25-0100 single hook used with clear base.

### Step 1

If using this assembly you should also have clear anchor bases. (Parts shown to right) Place open end of hook through anchor- from the top of the anchor base.

### Step 2

See individual holder instructions for hanging.

The Clear Locking Hook is a trademark of Rose Displays, Ltd. Neither the manufacturer nor any sales agent may be held liable for injury, loss or damage resulting from the use of these products. Part #99INSCLH

**rose displays**

*The Signware Specialists*

35 Congress Street, Salem, MA 01970  
Tel# 1-800-631-9707 Fax# 1-800-560-2890  
e-mail: signware@rosedisplays.com