FabriWare™
Soft Sign System

Signware
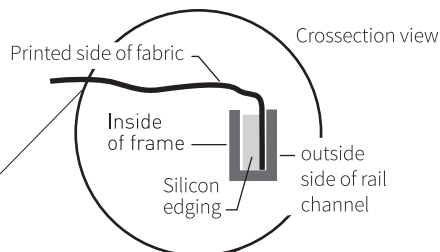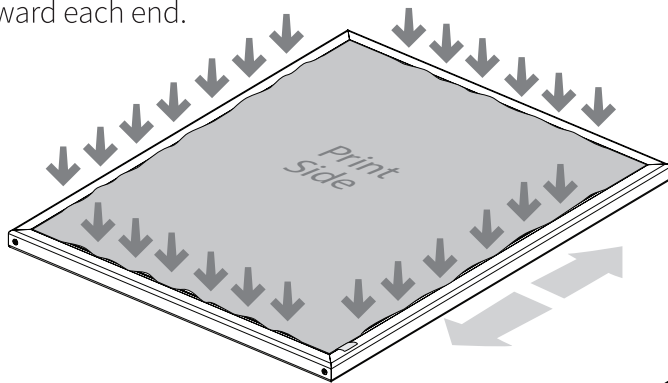
Fabric Insert Instructions

1. From front side of frame, insert fabric graphic into all 4 corners first, in diagonal order.

TIP Be sure printed side is facing out and the silicon edge is oriented as shown here.

Crossection view

Printed side of fabric

Inside of frame

Silicon edging

outside side of rail channel

Print Side

2. Insert fabric edge only at the center of each rail, pushing directly downward

Print Side

3. Use downward pressure to insert the remaining edge, working out from the center toward each end.

Pull-tab for removing fabric graphic, is sewn into edge and can also be tucked away.

Print Side

Print Side

4. Complete