

# **Parts**

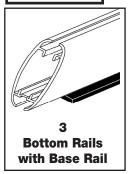

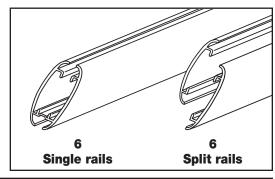





Another quality product from Rose Displays' Ano® line of products.

## **Instructions for Assembly**

#### Note:

We recommended that two people assemble this kiosk.

### Step 1a

Slide spine into vertical rail.


### Step 1b


Slide another vertical rail onto the other edge of spine. Repeat for all vertical rails and spines.


### Step 2


Carefully insert corner brackets into ends of <u>bottom</u> rails, using thumb as shown in illustration. Two brackets per end of each rail. Bracket can bend if forced.

Detail- It is important that the corner bracket tension tab faces toward outside of frame. (2b)

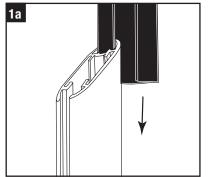


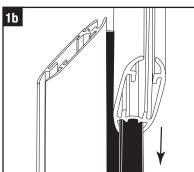

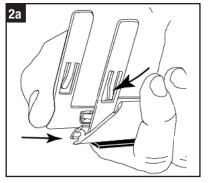

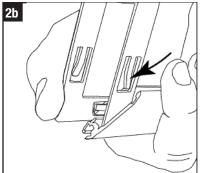

(Continued on other side)





## **Instructions for Assembly continued**

Another quality product from Rose Displays' Ano® line of products.

### Step 3

Lay out the bottom rails on the floor as they will be configured.

### Step 4

Assemble the vertical rail assemblies onto the upward facing corner brackets already inserted into the bottom rails. All four brackets should go into the vertical rails at one time.

Note: (4 way only) The last vertical rail will be tensioned. This is normal.

### Step 5


Insert corner brackets into ends of split rails, 1 per end. Use thumb as shown in illustration.


#### Step 6


Assemble split rails onto top ends of vertical rails, one inside and one outside of each side of the AnoKiosk.


### Step 7


Insert and change signs through top of each side.

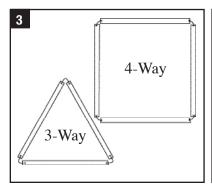

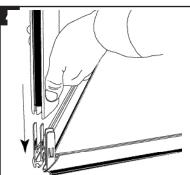

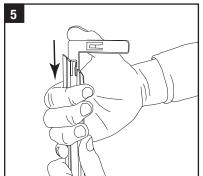

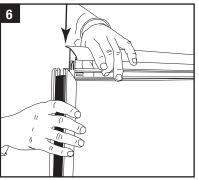

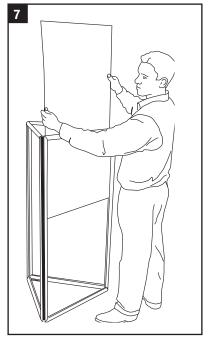


# Another quality product from Rose Displays' Ano® line of products.

## **Parts**







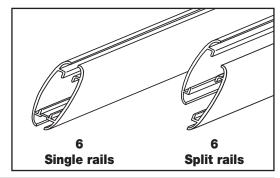

## **Instructions for Assembly**

#### Note:

We recommended that two people assemble this kiosk.

### Step 1a

Slide spine into vertical rail.


### Step 1b


Slide another vertical rail onto the other edge of spine. Repeat for all vertical rails and spines.


### Step 2


Carefully insert corner brackets into ends of bottom rails, using thumb as shown in illustration. Two brackets per end of each rail. Bracket can bend if forced.

Detail- It is important that the corner bracket tension tab faces toward outside of frame. (2b)

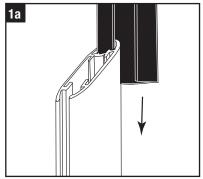

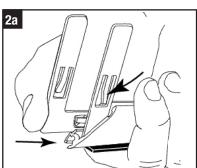

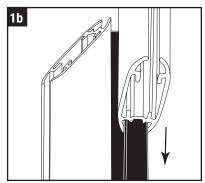

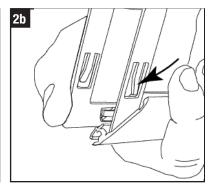

(Continued on other side)

## **Instructions for Assembly continued**

Another quality product from Rose Displays' Ano® line of products.

### Step 3

Lay out the bottom rails on the floor as they will be configured.

### Step 4

Assemble the vertical rail assemblies onto the upward facing corner brackets already inserted into the bottom rails. All four brackets should go into the vertical rails at one time.

Note: (4 way only) The last vertical rail will be tensioned. This is normal.

### Step 5


Insert corner brackets into ends of split rails, 1 per end. Use thumb as shown in illustration.


## Step 6


Assemble split rails onto top ends of vertical rails, one inside and one outside of each side of the AnoKiosk.


### Step 7


Insert and change signs through top of each side.

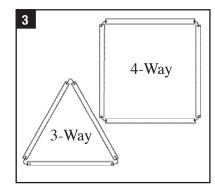

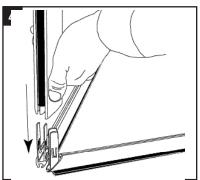

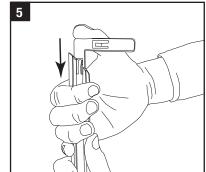

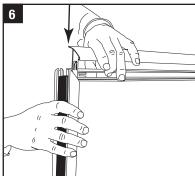

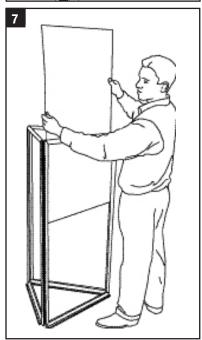

The AnoKiosk™ is a trademark and Ano is a registered trademark of Rose Displays, Ltd. Neither the manufacturer nor any sales agent may be held liable for injury, loss or damage resulting from the use of these products.

Part #02INAnoKioskRigidBase Rail